


1/2" PEX F1960 Expansion Inlet

INL-ST-12-PEX-EX

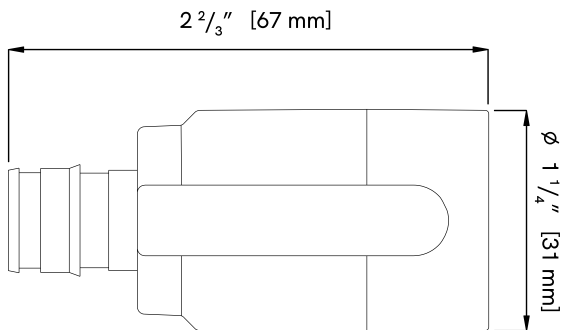

This inlet replaces the default hydrant inlet with a 1/2" PEX F1960 connection. Quickly and reliably connect your Aquor hydrant to 1/2" PEX tubing with a cold-expansion connection.

Precision-cast 316L stainless steel. Includes stainless steel valve reset spring.

- For use with 1/2" PEX tubing
- Replaces the back end (inlet) of your Aquor hydrant
- 100% lead-free 316L stainless steel

Compatibility	All Aquor hydrants and outlets except the Ground Hydrant
Inlet Threading	1/2" PEX Expansion
Outlet Threading	Unique to Aquor hydrants and outlets
Connection Type	ProPEX
Material	Stainless Steel
Specification	ASTM F1960
Warranty	Limited Lifetime
SKU	INL-ST-12-PEX-EX

1/2" PEX F1960 Expansion Inlet

INL-ST-12-PEX-EX

Installation



1) Remove existing inlet by unscrewing counterclockwise. Ensure the O-ring on the hydrant body is properly seated.

Note: DO NOT use Teflon tape on hydrant body threads. This may cause leaks. Only use Teflon tape on plumbing connection (fitting) threads.



2) Hand tighten new inlet on hydrant body by threading clockwise.



3) Attach to PEX tubing using appropriate tool and expansion ring. Check for leaks and test the hydrant operation.

For PEX joints, wait 10 minutes for it to shrink down and set before turning on the water.

If possible, use an expansion loop of PEX for easy plumbing maintenance down the road.